

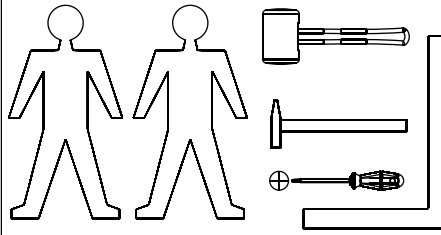
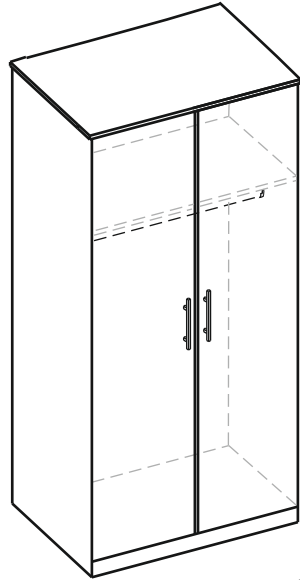
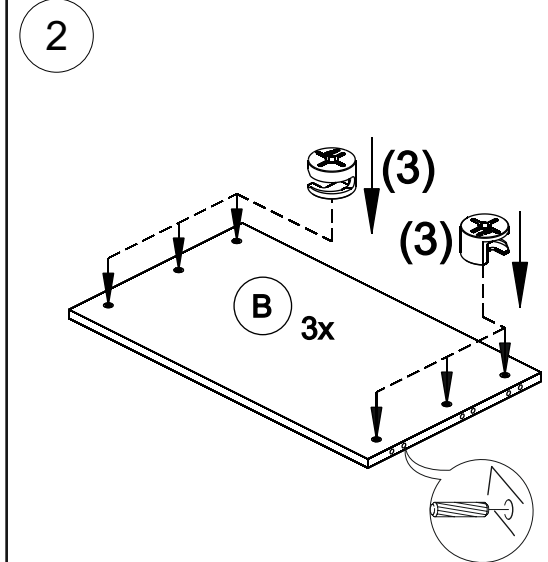


MONTAGEANLEITUNG / MONTÁŽNY NÁVOD // SERVISKARTE / SERVISNÁ KARTA


RIO - Šatník 2 dverový CRUZ


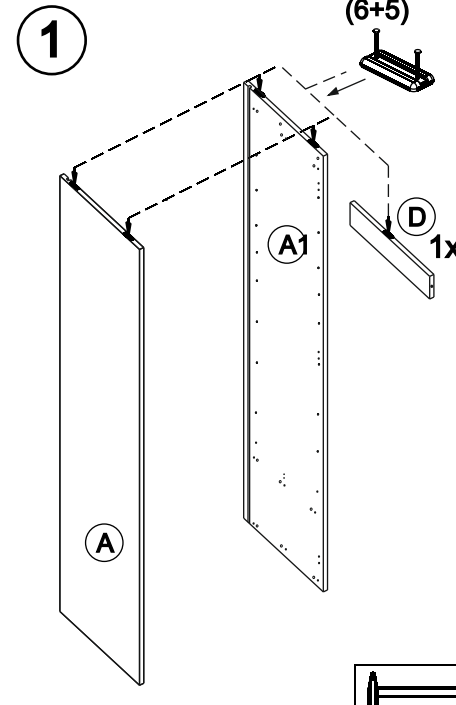


1	$\varnothing 8 \times 35$ x20	2	$\varnothing 5$ x18	3	$\varnothing 15$ x18
4	$\varnothing 15$ x18	5	$\varnothing 1,2 \times 25$ x32	6	x5
7	x8	8	$\varnothing 3,5 \times 20$ x8	9	$\varnothing 3,5 \times 16$ x16
10	x2	11	x2	12	M4x22 x4
13	x6	14	x6	15	
16	x1	17	$\varnothing 4 \times 25$ x1	18	x1 808mm
19		20		21	
22		23		24	


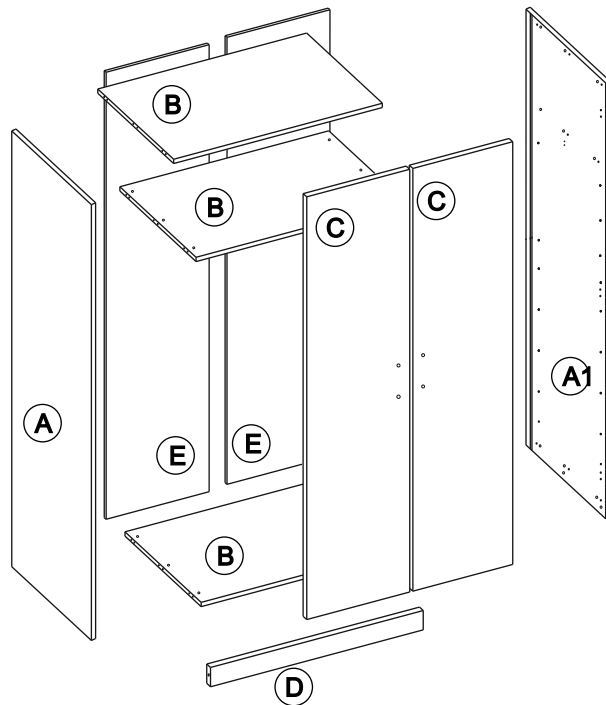


POZOR!!! Kolíky nabíjat' do hrany!!




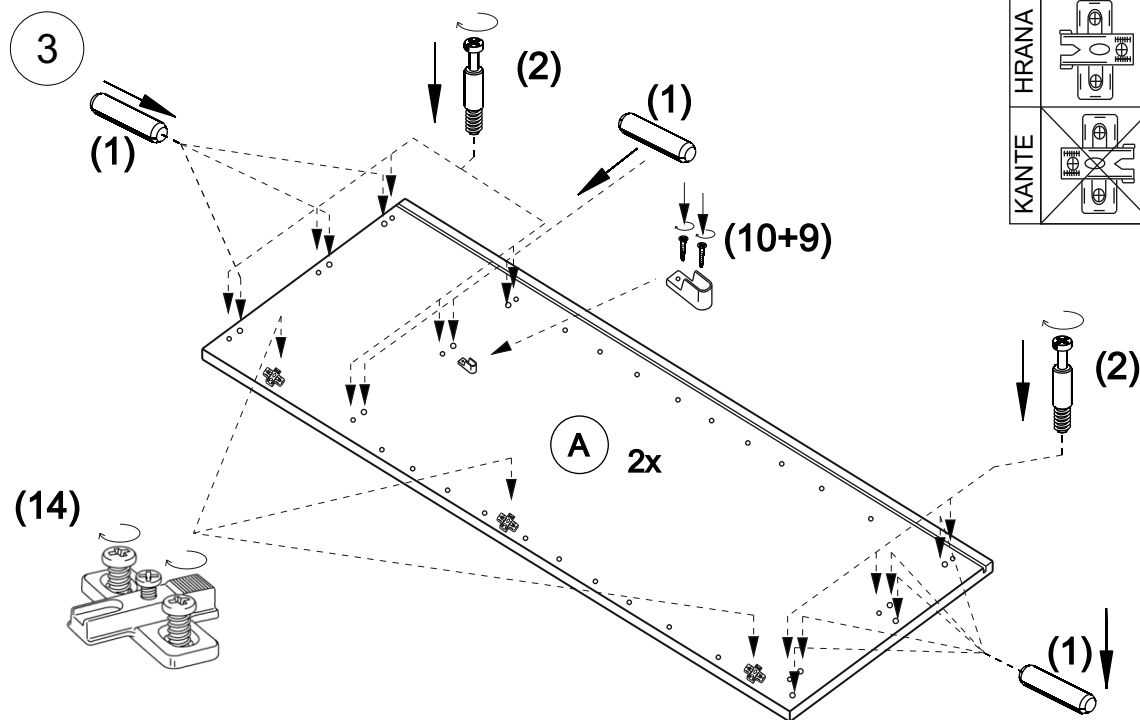
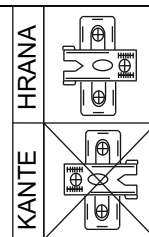


5

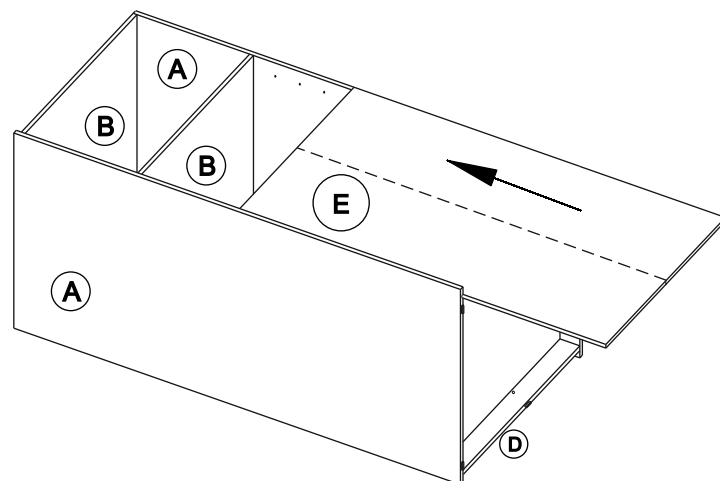


4


zudrehen / zatiahnut'

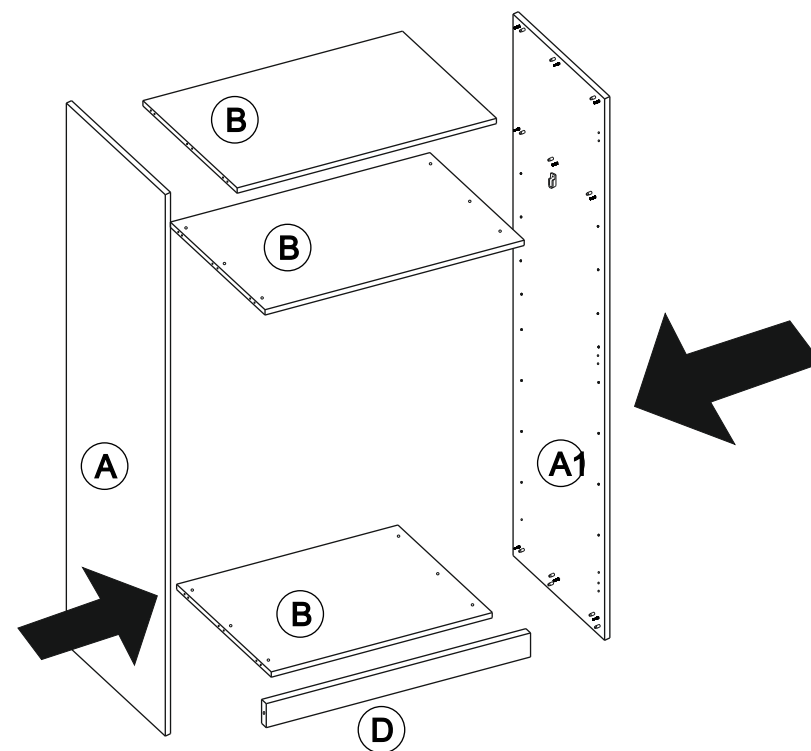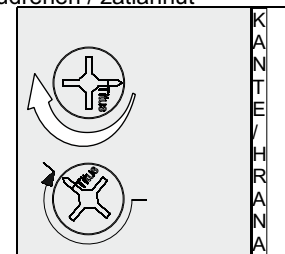





6

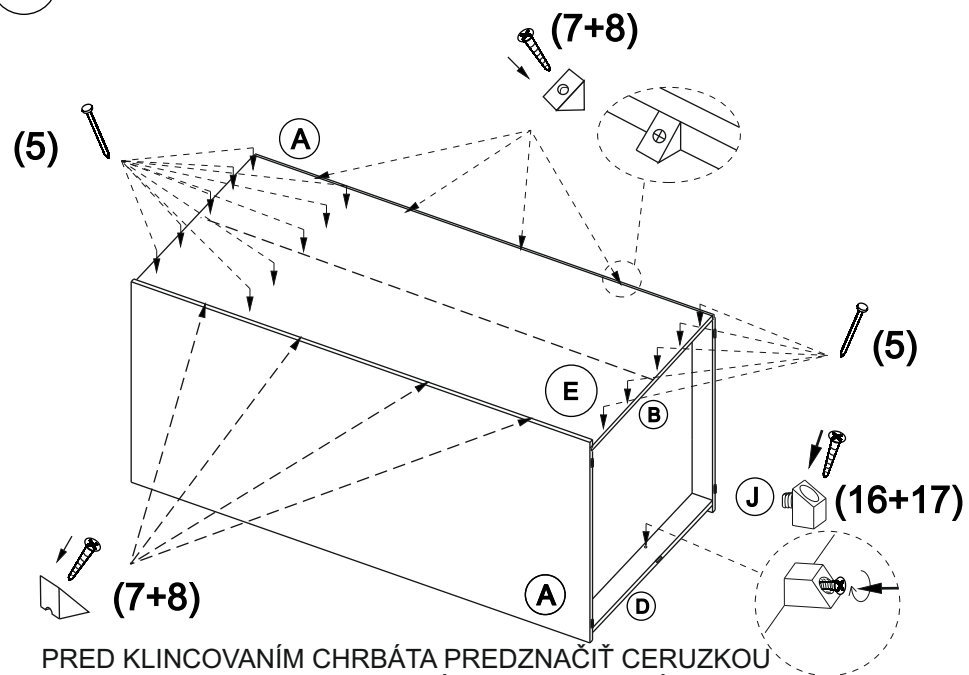


PRED KLINCOVANÍM CHRÁTA PREDZNAČIŤ CERUŽKOU
STRED MEDZISTENY NA ZADNÚ STRANU CHRÁTA
VOR DER BEFESTIGUNG DER RUCKWAND NITTELS NAGEL
DIE MITTE DER MITTELSEITE MIT DEM SHIFT AUF HINTERE
SEITE DER RUCKWAND VORMERKEN





8

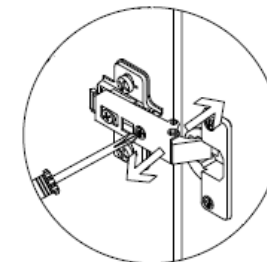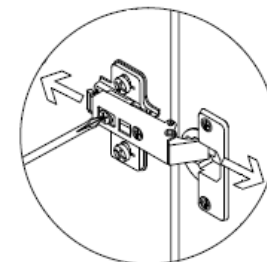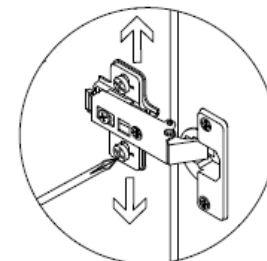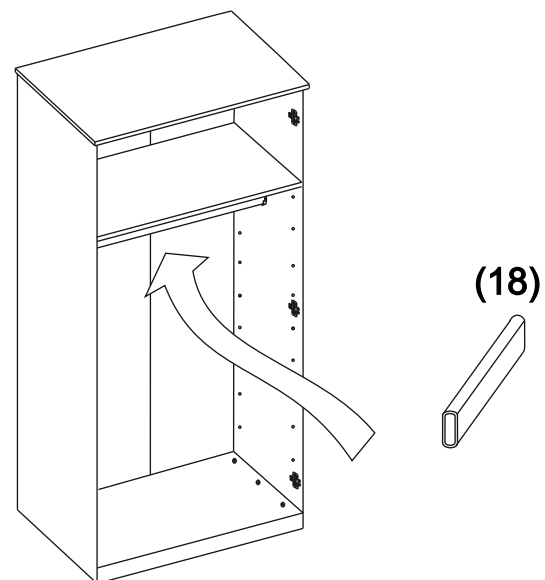

9

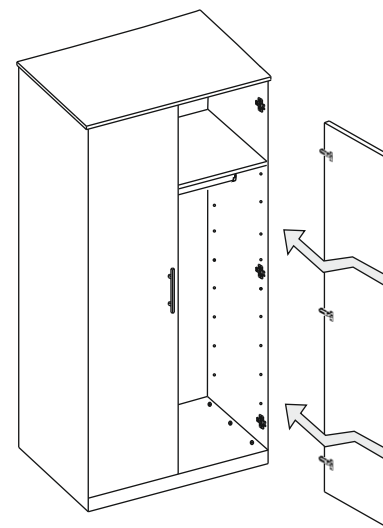

7

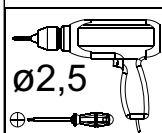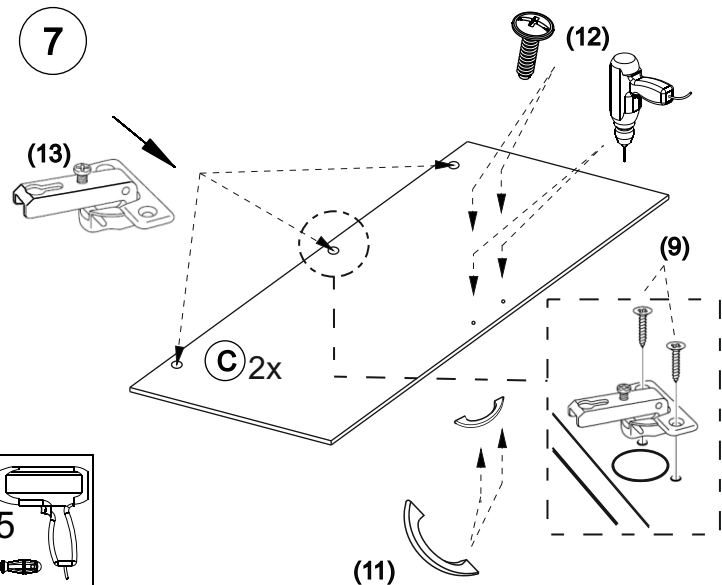

Ø2,5