

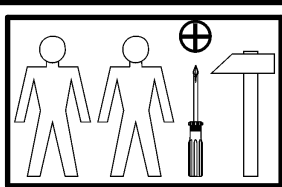
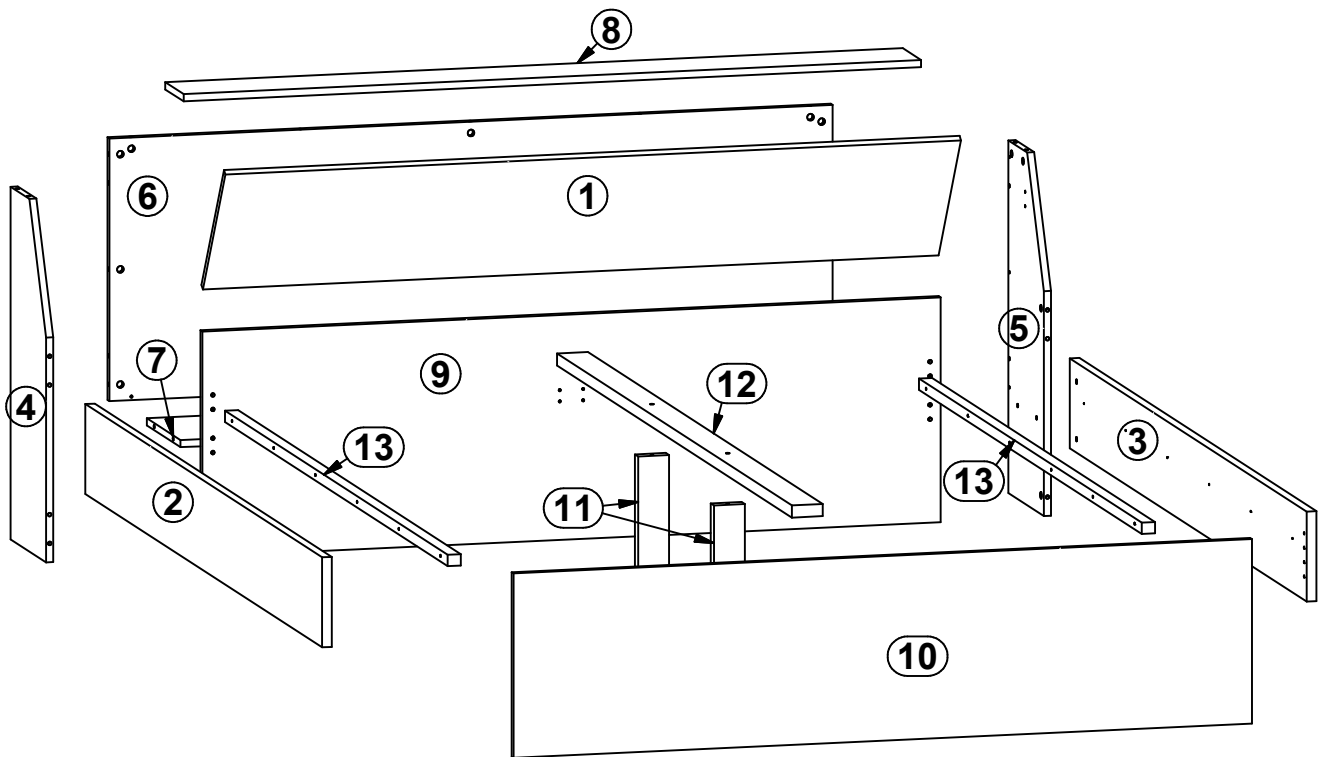
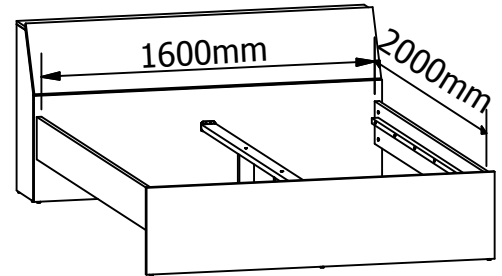
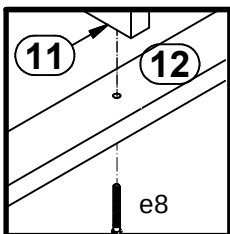
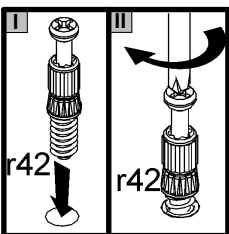
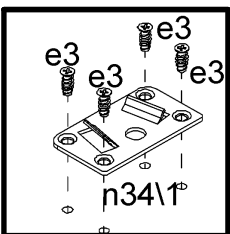
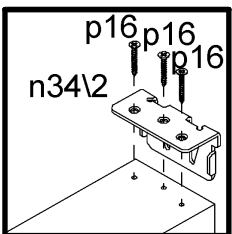
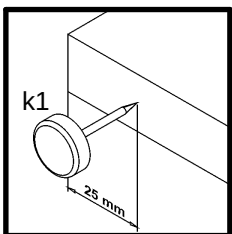
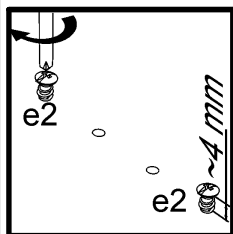
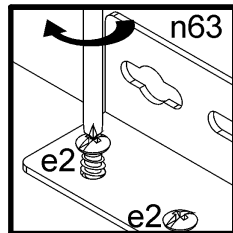
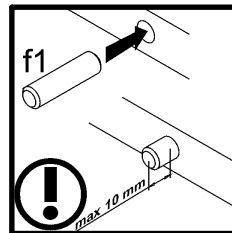


A	B	C	D
1	L16-010	1664	345
2	L16-101	2000	200
3	L16-102	2000	200
4	L16-105	784	300
5	L16-106	784	300
6	L16-113	1636	584
7	L16-311	1636	284
8	L16-312	1668	155
9	L16-408	1670	500
10	L16-409	1670	410
11	ZZ1-422	309	70
12	ZZ1-719	1983	70
13	ZZ1-720	1880	25


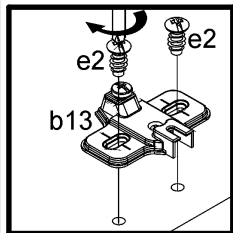


4x a14	4x b13	24x e2 φ6,3x13 mm	8x e3 φ6x13 mm	4x e5 Ø6,3x13 mm	2x e8 φ7x60 mm	26x f1 φ8x30 mm	4x j117 M6x84 mm	10x k1
2x m3 L=236 mm	2x n34/1	2x n34/2	2x n63 130x34x34/2mm	6x p1 Ø3,5x13 mm	12x p11 φ4x45 mm	6x p16 φ3,5x25 mm	8x p51 φ3,5x15 mm	12x p6 φ4x35 mm
23x r1 φ15x12mm #16	23x r42	4x r43 φ10x16mm	15x s2 ø16	1x z1				




1


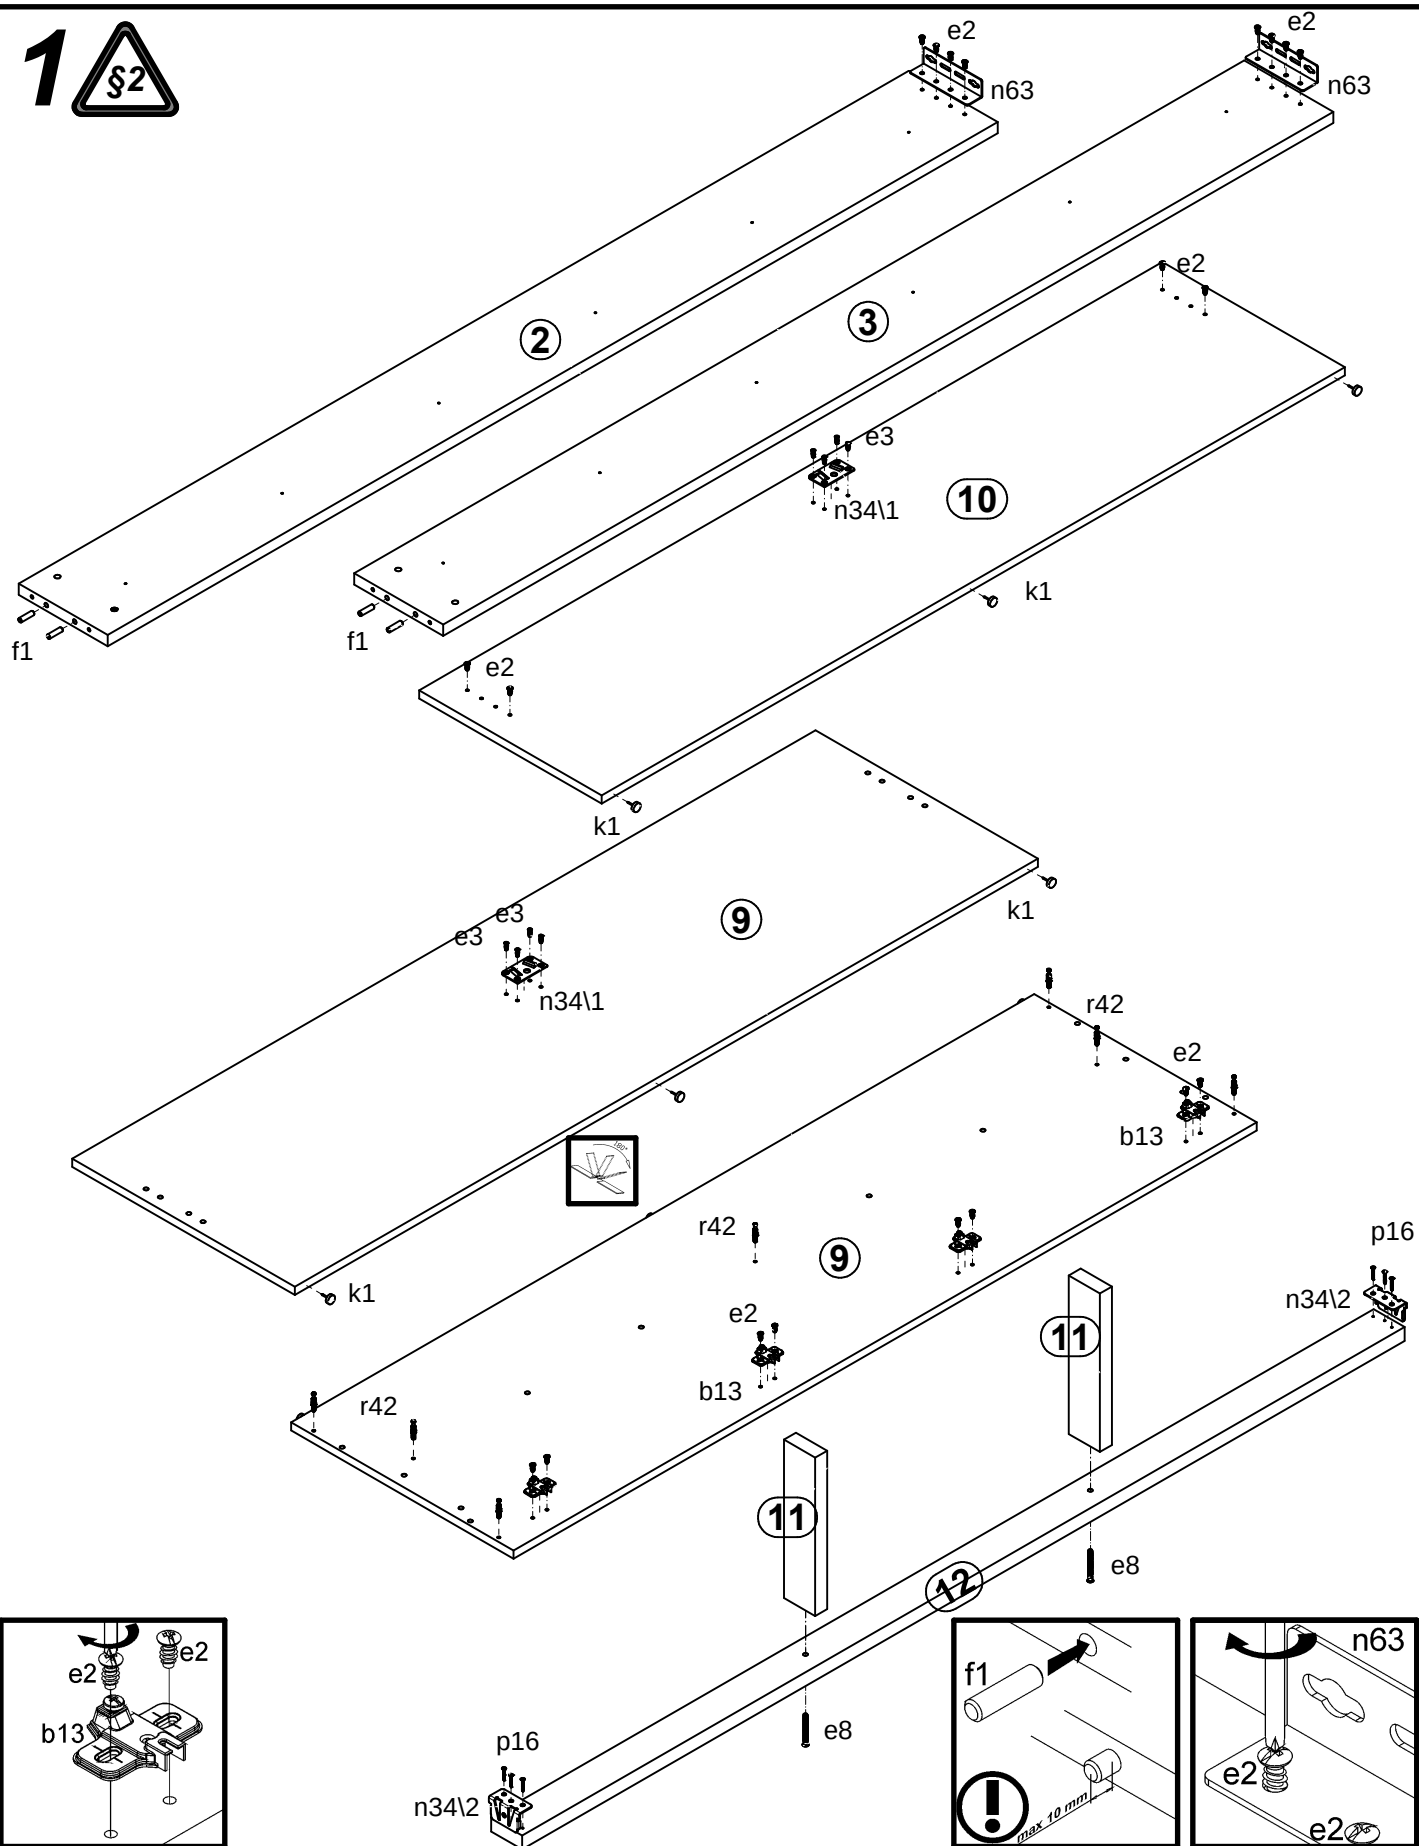


2

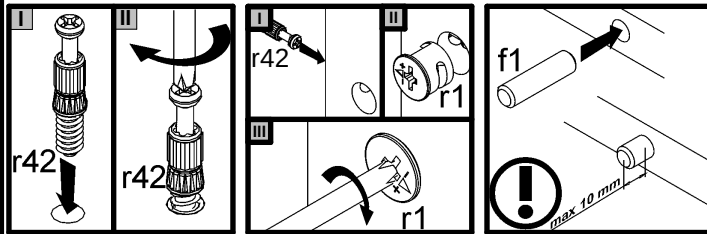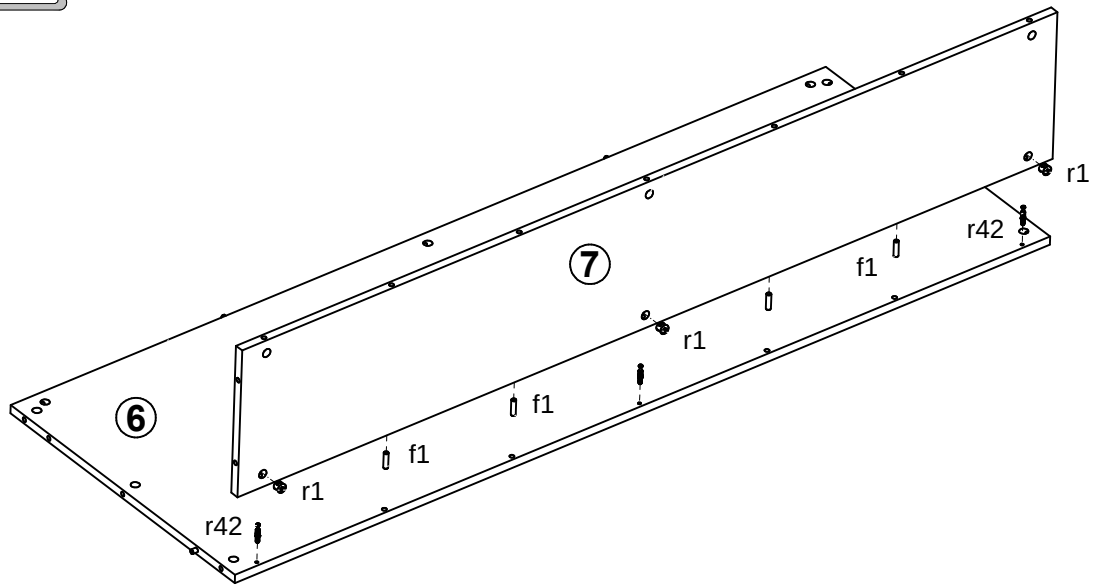

3

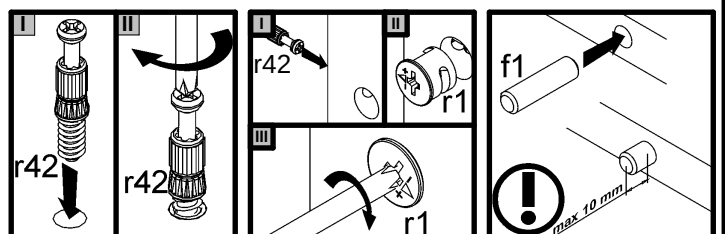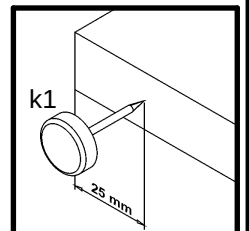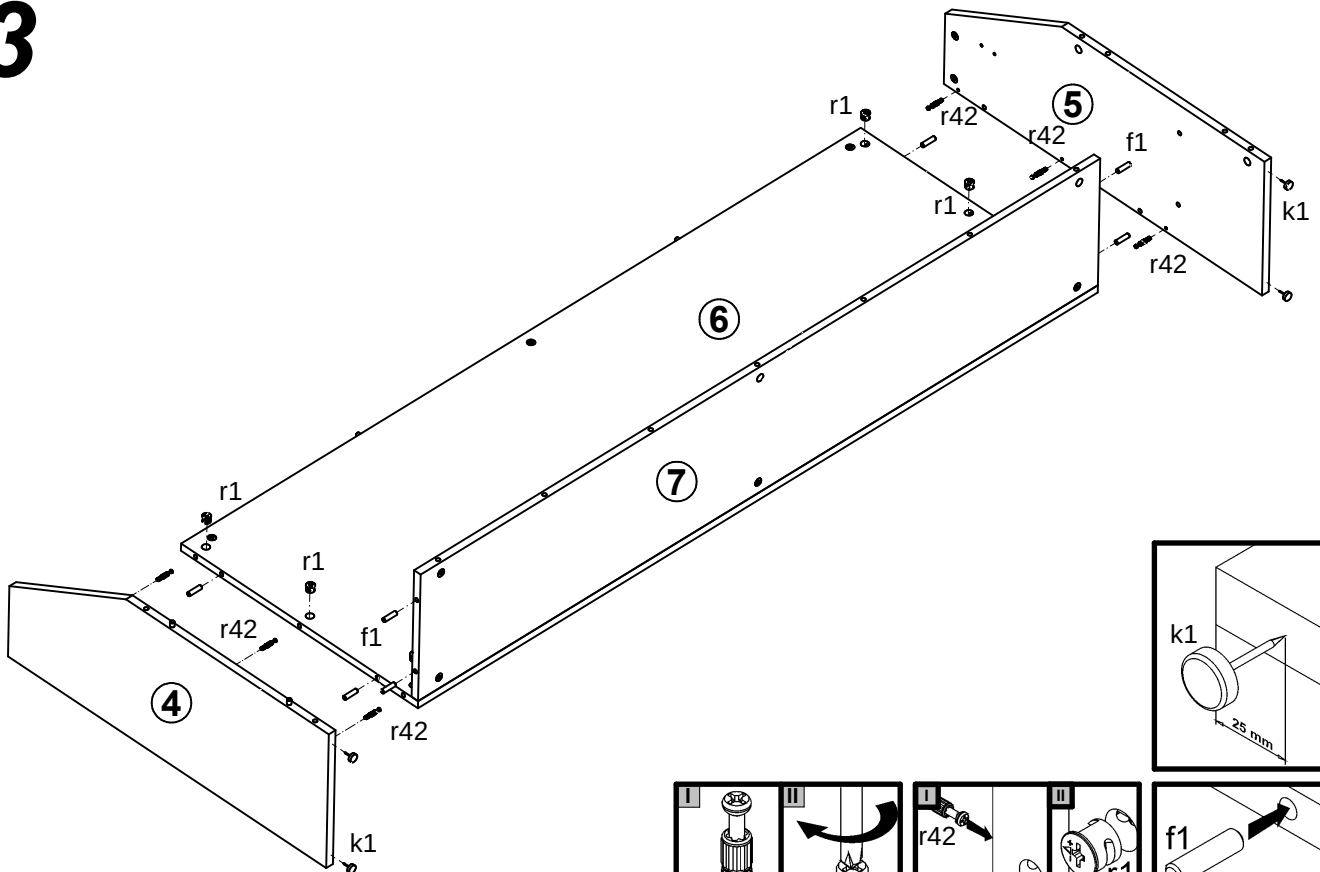

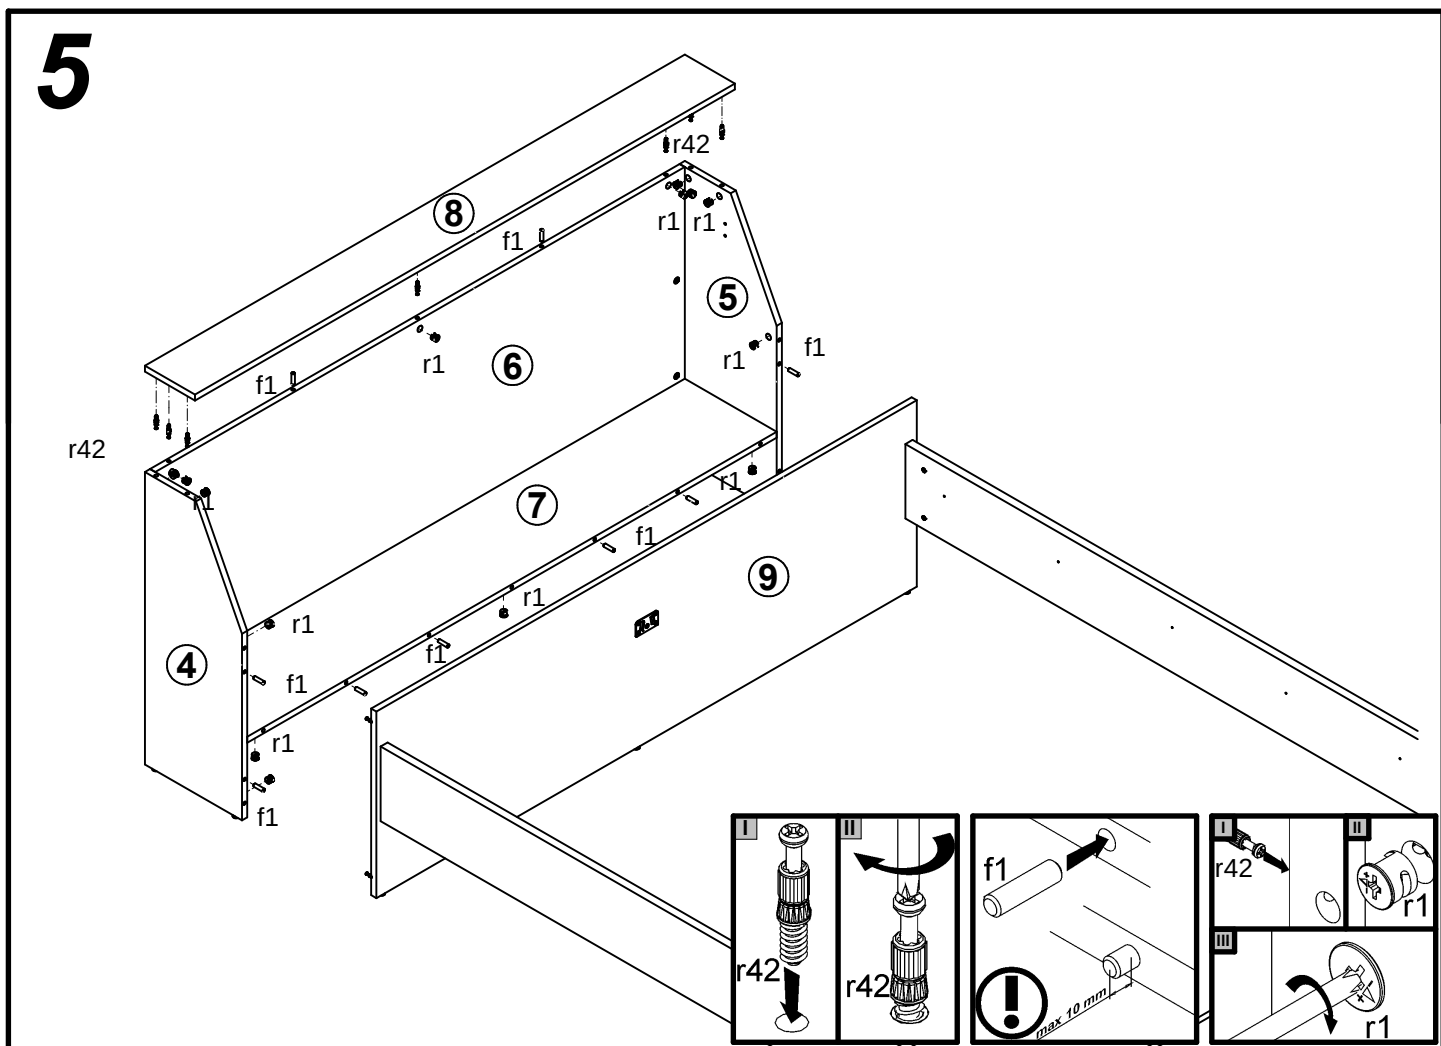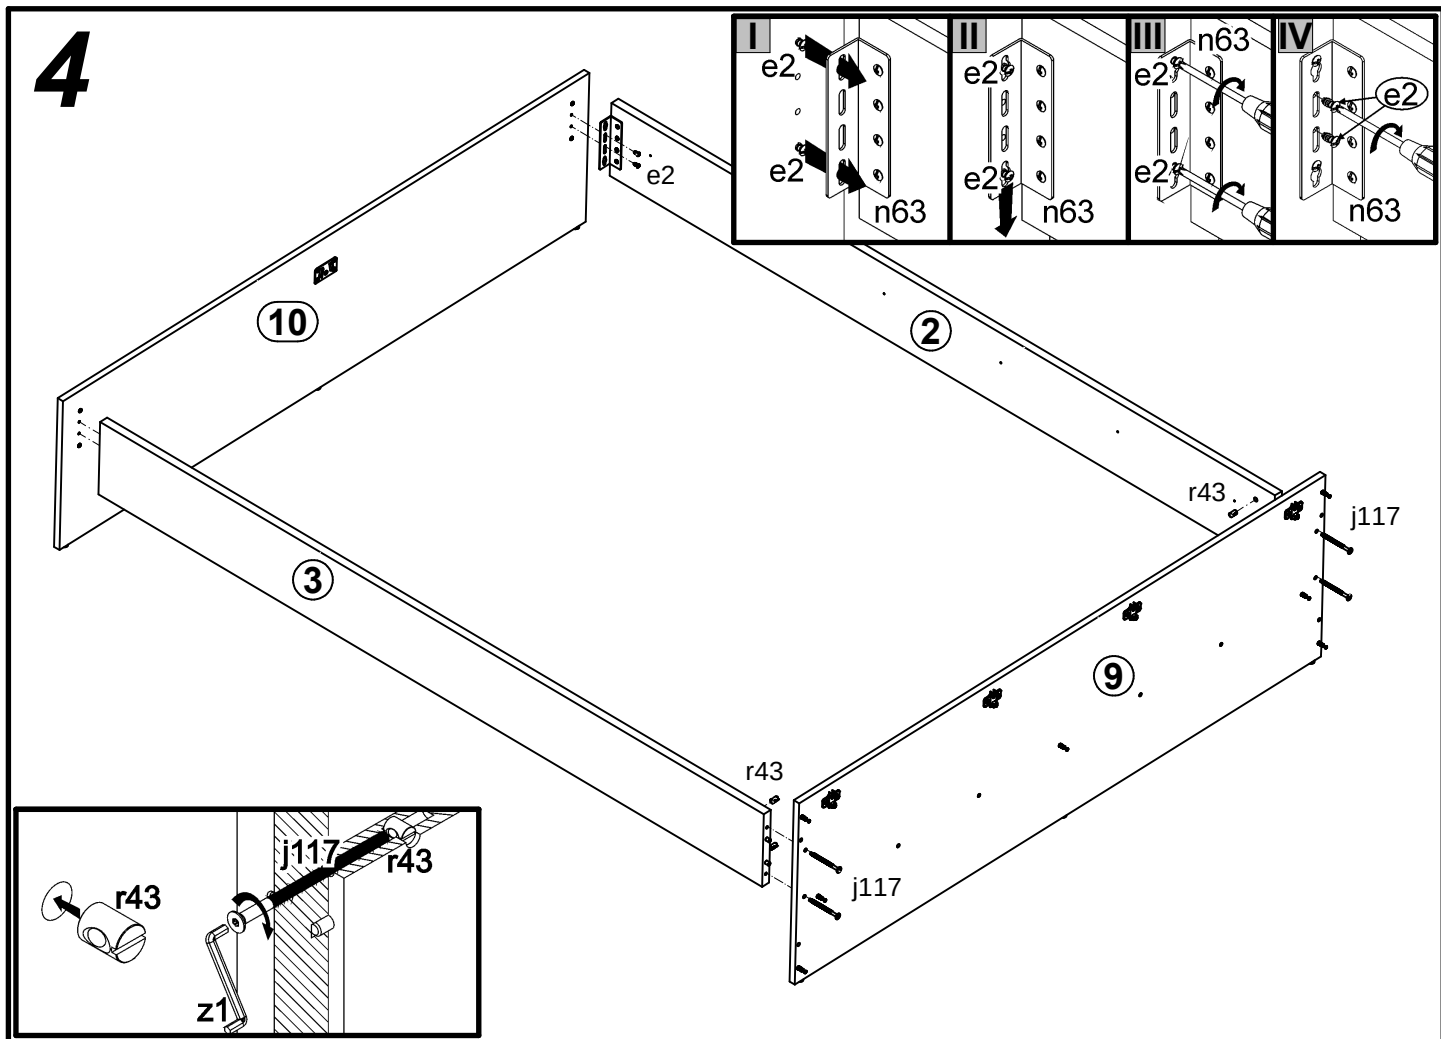

[illegible]

7

Diagram 7 illustrates the assembly of the bed base. The main view shows the bed frame with the slatted base. The headboard is being attached to the side rail. Screws labeled 'p6' are used to secure the slats to the side rail. An inset shows a close-up of a screw being inserted into a pre-drilled hole in the side rail.