



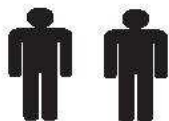

MONTAŻNY NAVOD
 ASSEMBLING INSTRUCTIONS
 ISTRUZIONI DI MONTAGGIO
 MONTAGEANLEITUNG
 ISTRUÇÕES DE MONTAGEM
 MANUAL DE MONTAJE
 INSTRUKCJA MONTAŻU

PRED ZAČIATKOM
 MONTÁŽE, SI POZORNE
 PREŠTUDUJTE
 MONTAŽNY NAVOD.

Šírka 1000
 Vyška 2250
 Hĺbka 400

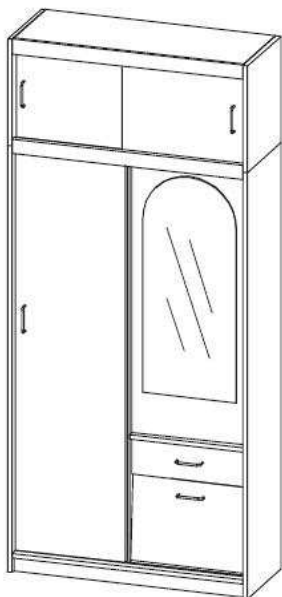

1 h



X1



X1

UPOZORNENIE !

Prosíme škvŕny utierať
 len prachovkou alebo
 vlhkou handričkou.
 Nepoužívajte agresívne
 čistiace prostriedky!



ANTES DE COMERCAR, ADIAR-
 SE AOS CONSELHOS DE
 MONTAGEM EM ANEXO

ANTES DE EMPEZAR
 CONSULTE LOS CONSEJOS
 PARA EL MONTAJE

PRZED ROZPOCZĘCIEM
 ZAPOZNAĆ SIĘ Z ZAŁĄCZONĄ
 INSTRUKCJĄ MONTAŻU

KRZYSZTOF 100

KdK

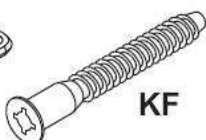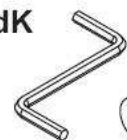


KF




Z



G

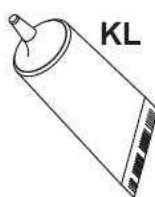

KL




K




SL




PD

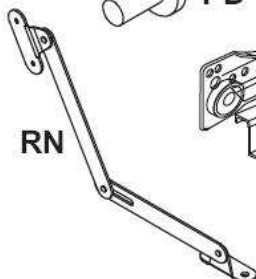

RN

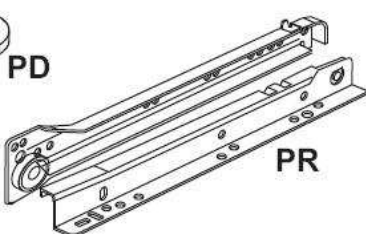


PR

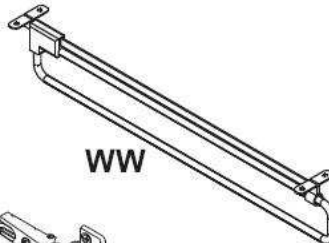

WW



EK
6,3x13

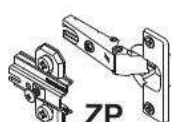

ZP




ED



EM

3,5x15

W

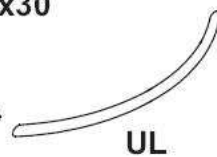


UL




S




①

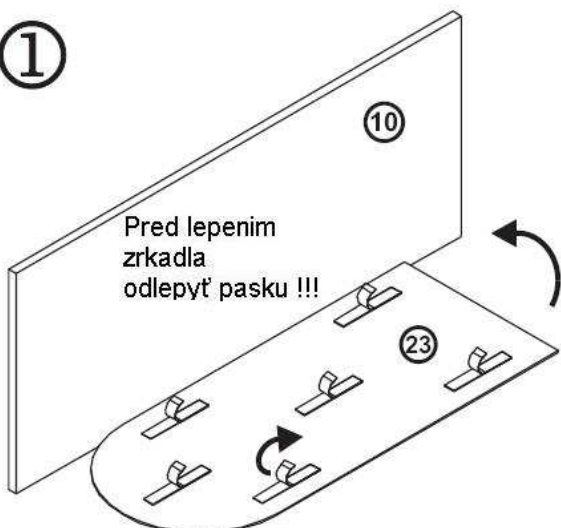


Pred lepením
 zrkadla
 odlepyť pasku !!!

②

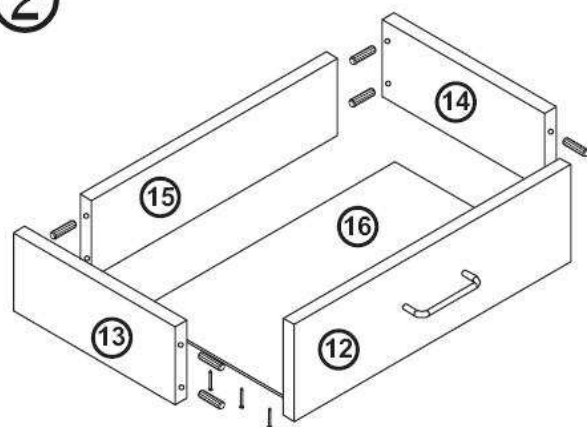


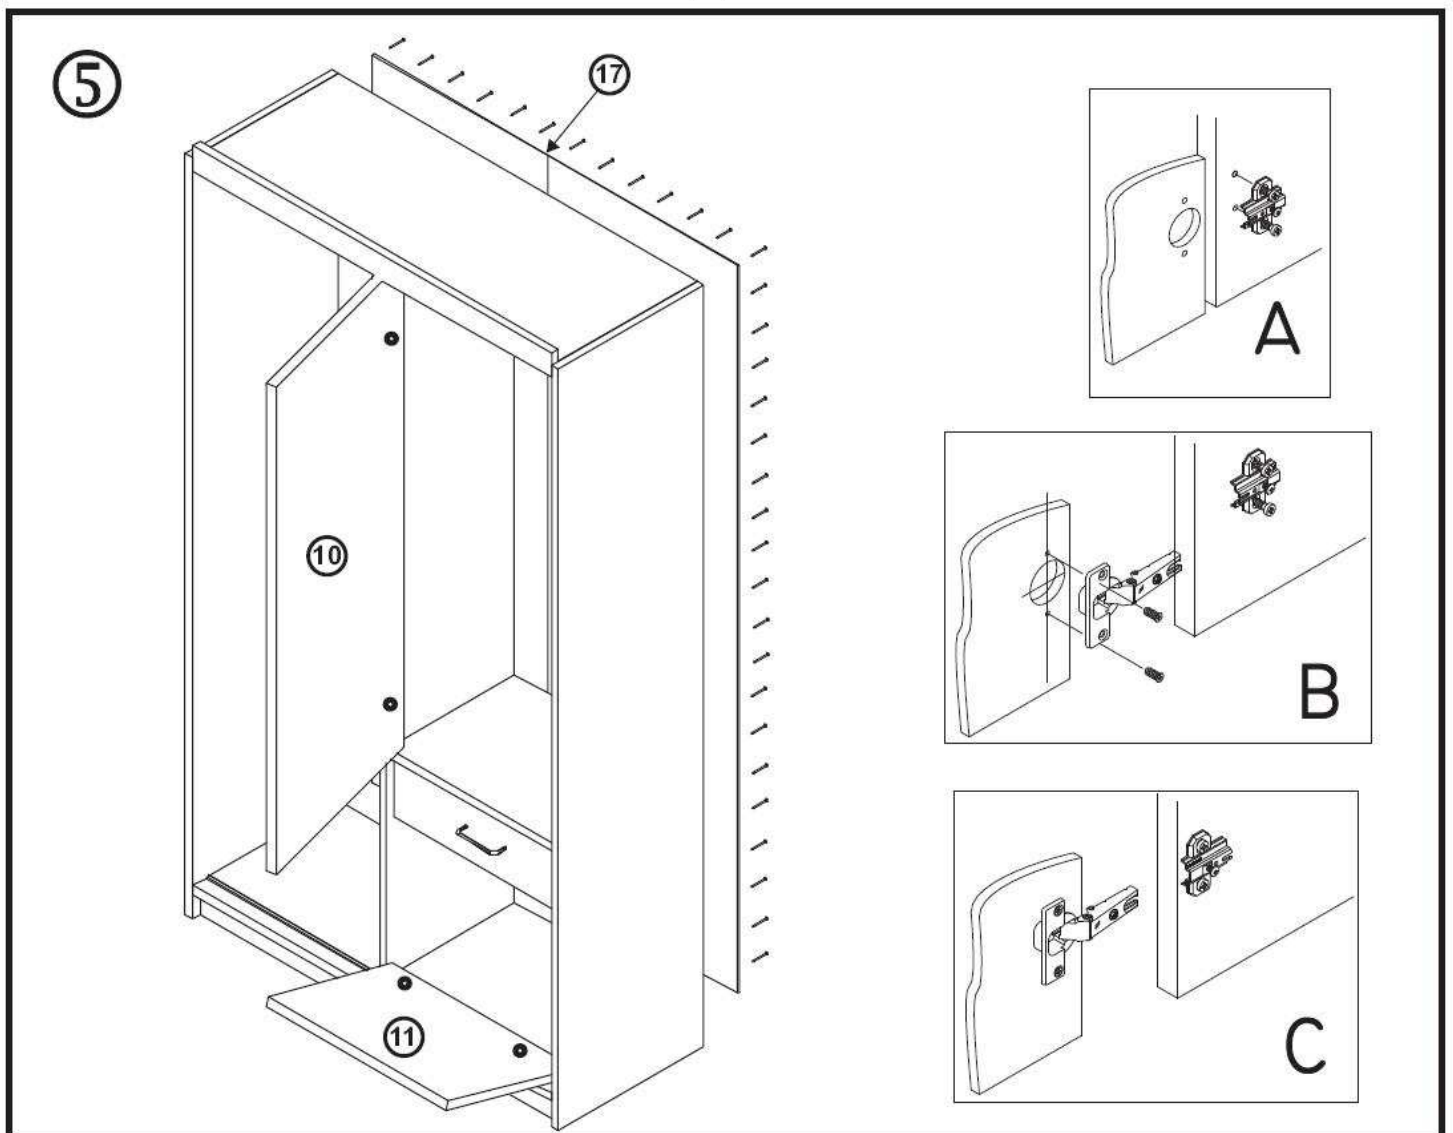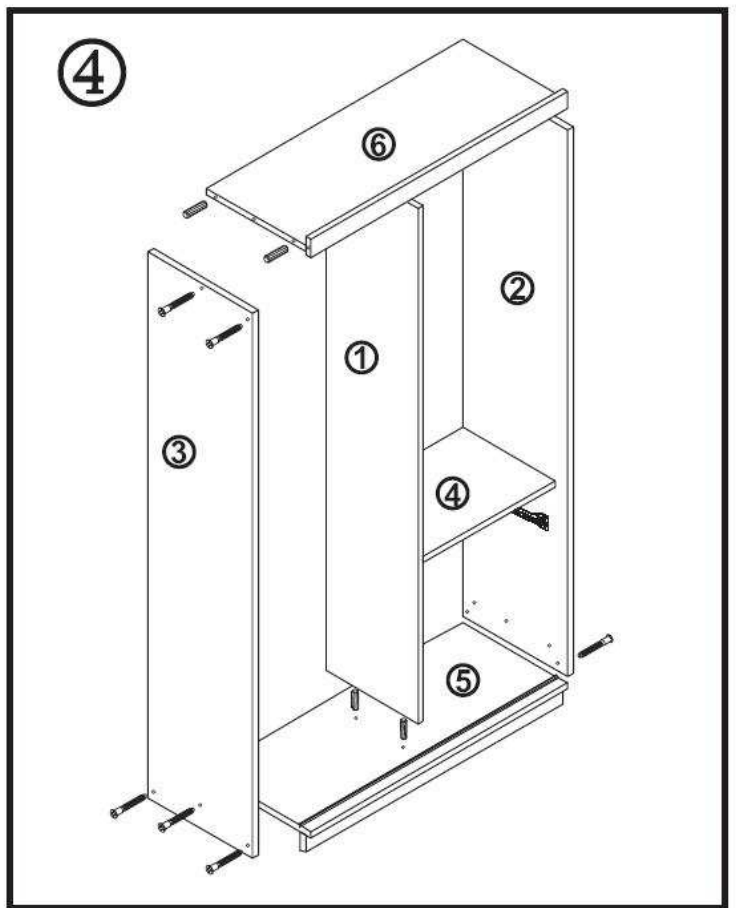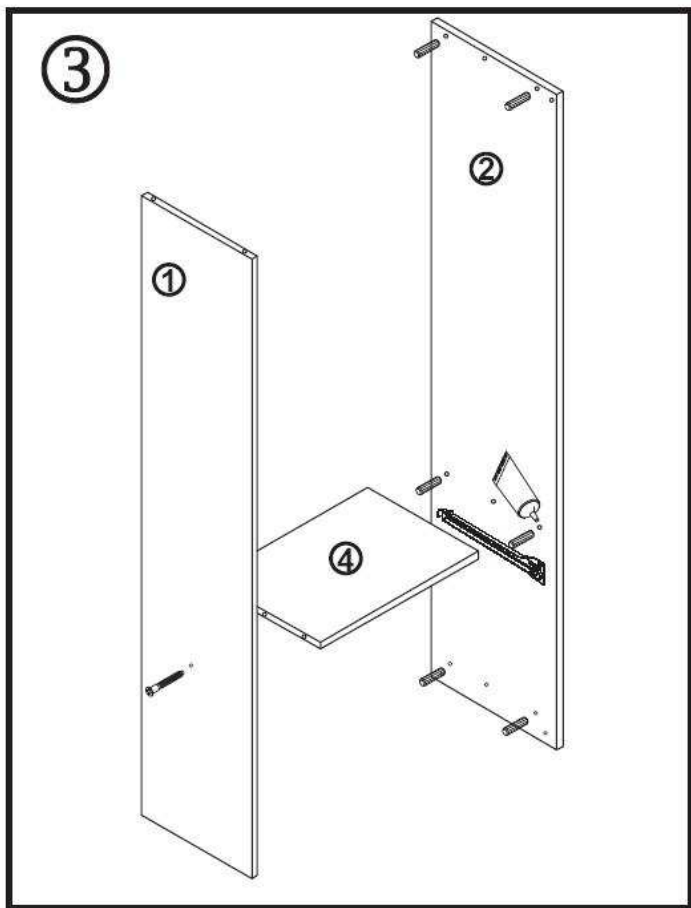

⑥

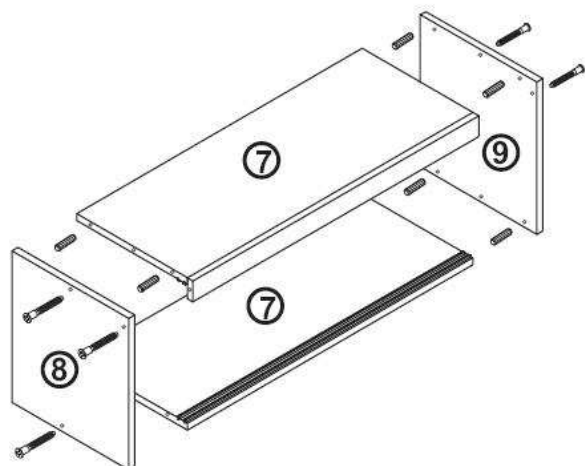

⑦

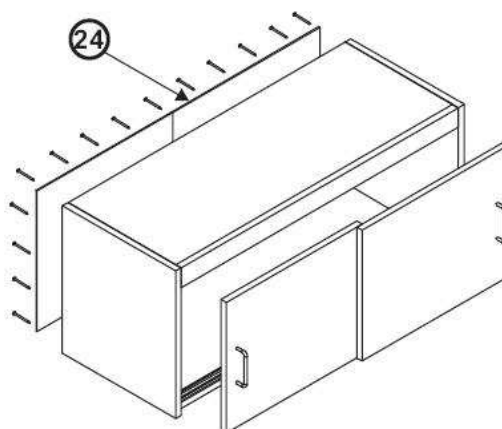

⑧

