


ASSEMBLY INSTRUCTION

MANHATTAN GB II 3 DRW BEDSIDE CABINET

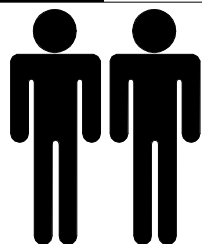


2 PERSON ASSEMBLY

FLOOR AREA
3.5M X 2.0M




CEILING HEIGHT
2.3M


(FLAT BULD)
REQUIRED ASSEMBLY SPACE

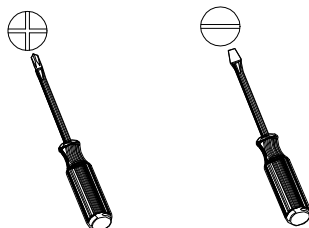

REQUIRED ASSEMBLY TOOLS


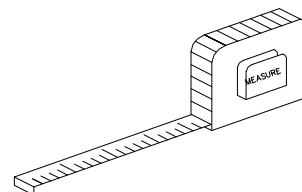


ASSEMBLED DIMENSIONS

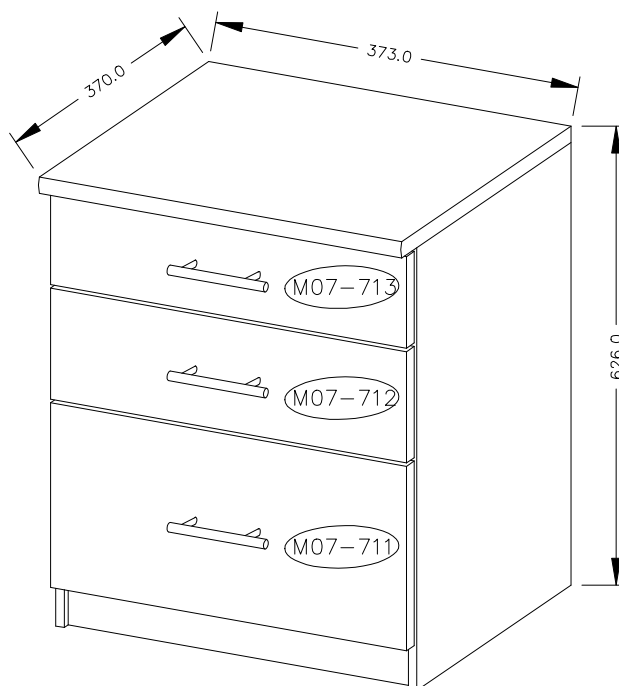





NO.	PART LIST	QTY
117	LEFT SIDE	1
118	RIGHT SIDE	1
410	UPPER PANEL	1
803	FRONT PLINTH	1
804	BACK PLINTH	1
711	DRAWER'S FRONT	1
712	DRAWER'S FRONT	1
713	DRAWER'S FRONT	1
9100	LEFT SIDE OF CARCASE	2
9110	RIGHT SIDE OF CARCASE	2
9130	LEFT SIDE OF CARCASE	1
9140	RIGHT SIDE OF CARCASE	1
961	BACK PANEL OF CARCASE	2
967	BACK PANEL OF CARCASE	1
051	BOTTOM OF DRAWER	3
013	BACK PANEL	1



PARTS LIST

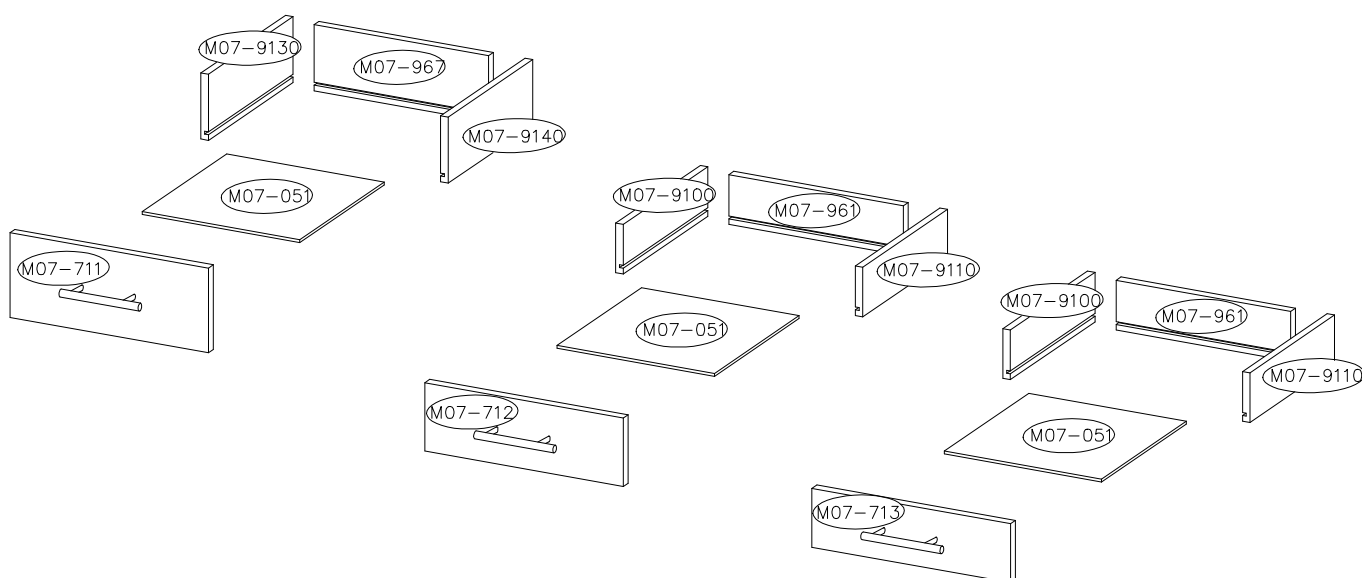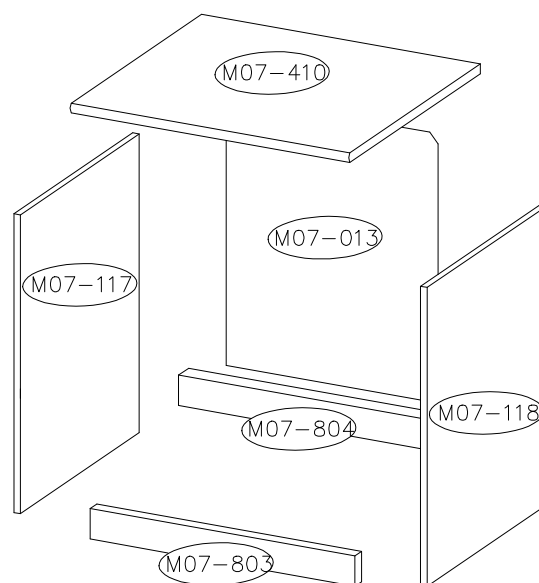


PACK 1 CONSISTS OF PARTS:

117, 118, 410, 711, 712, 713, 051, 803, 804,
9100, 9110, 9130, 9140, 961, 967, 013, Al, Fittings

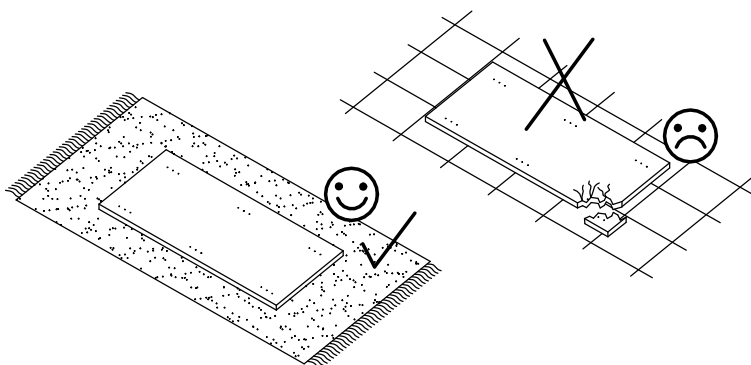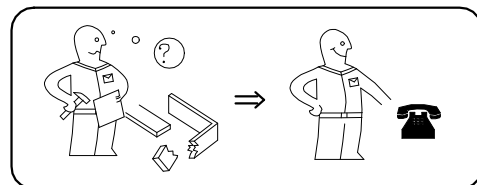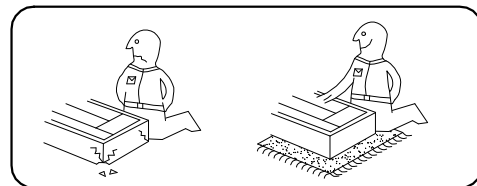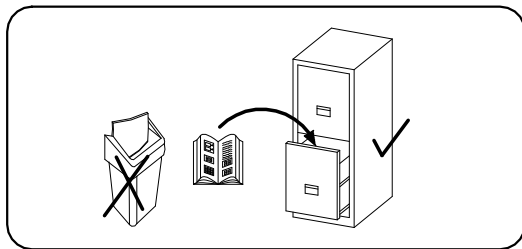

3.5X13  S	 V	3.0X15  P1	5.0X50  Q1	 R  L
4	2	18	14	3 KPL

 A	 B	 D	6.3X13  F	M4.0X40  G	 C	 J	 U1	3mm  K1	 I1
12	12	22	12	6	6	5	3	1	1

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

Care and Maintenance of your Furniture

Please periodically check all fittings and re-tighten as necessary.

To clean your item, please use a damp cloth and wipe clean.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Please do not place hot items (e. g. hot drinks) directly on to the wood surface.

Please do not drag or pull your furniture.


WARNING! IN ORDER TO HELP PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED

Free Standing Furniture with a height over 600mm


- Use the wall attachment device provided
- Never allow children to climb or hang on drawers, doors or shelves.
- Place heaviest items in the lower drawers or shelves
- Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product.
- Never open more than one drawer at a time.


1


		
A	B	D
4	2	6

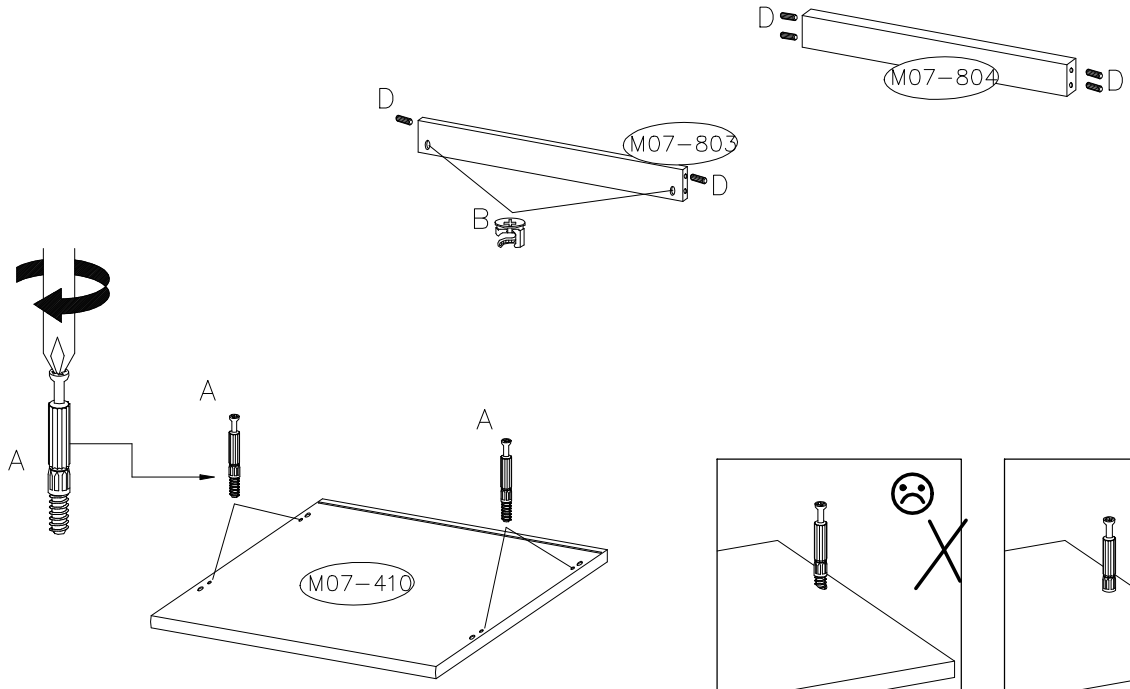


2

					
A	B	D	F	P1	R
2	4	4	12	6	L
					3 KPL

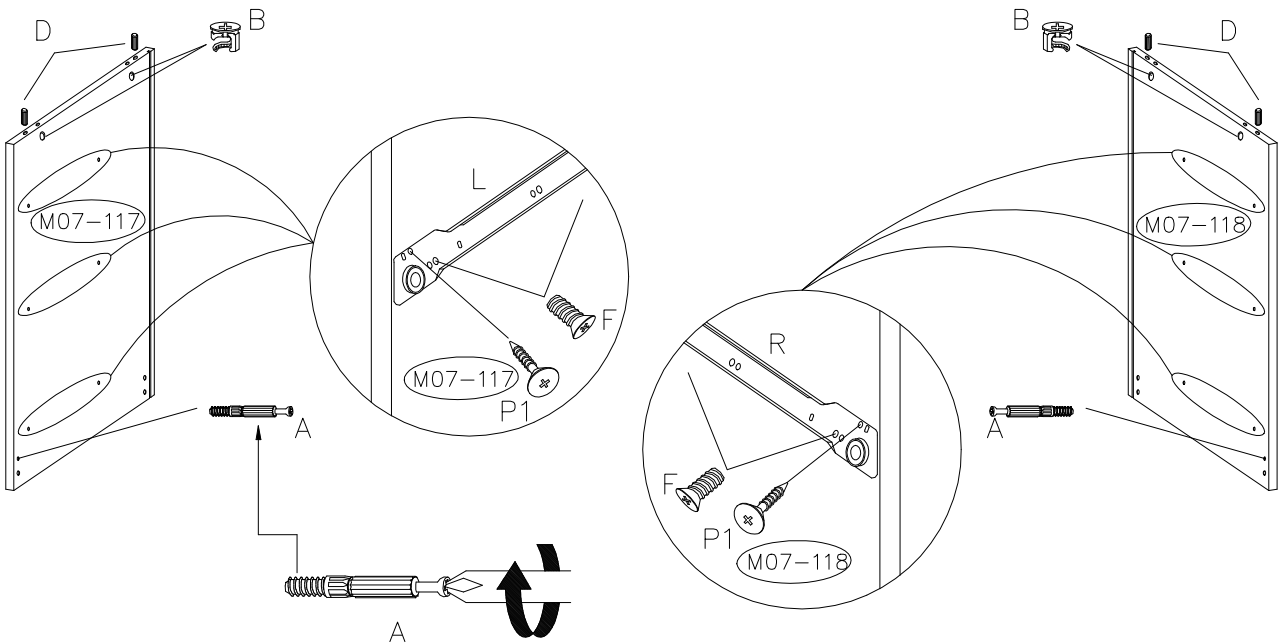


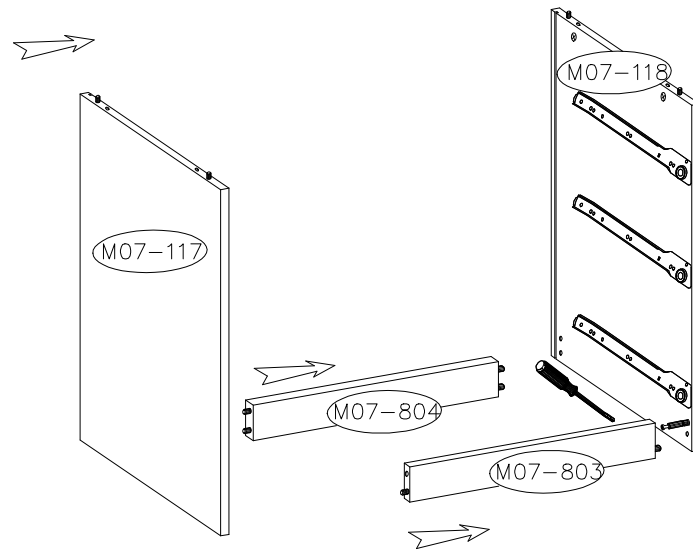



3.5x13	
	
S	V
4	2

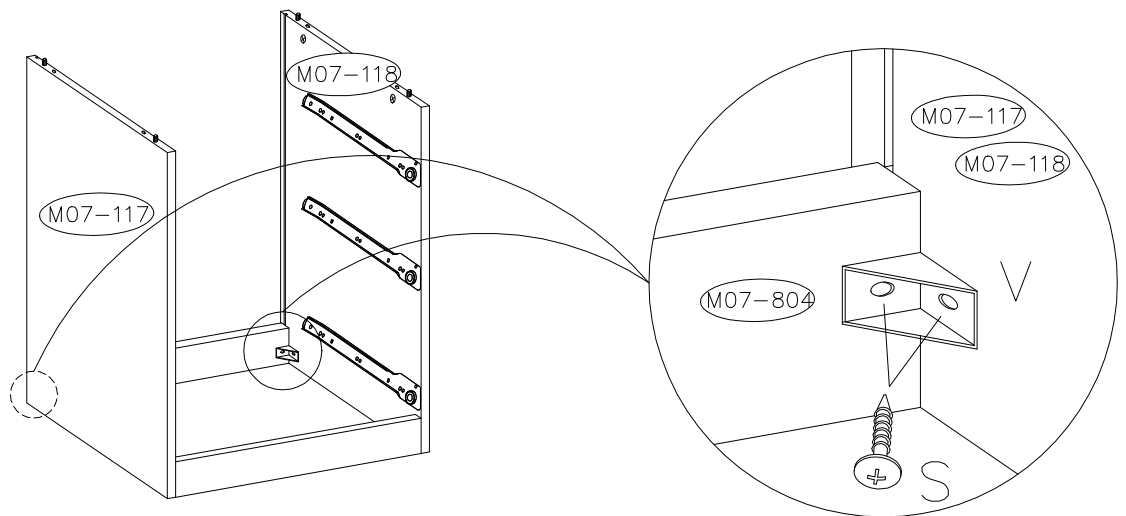








5

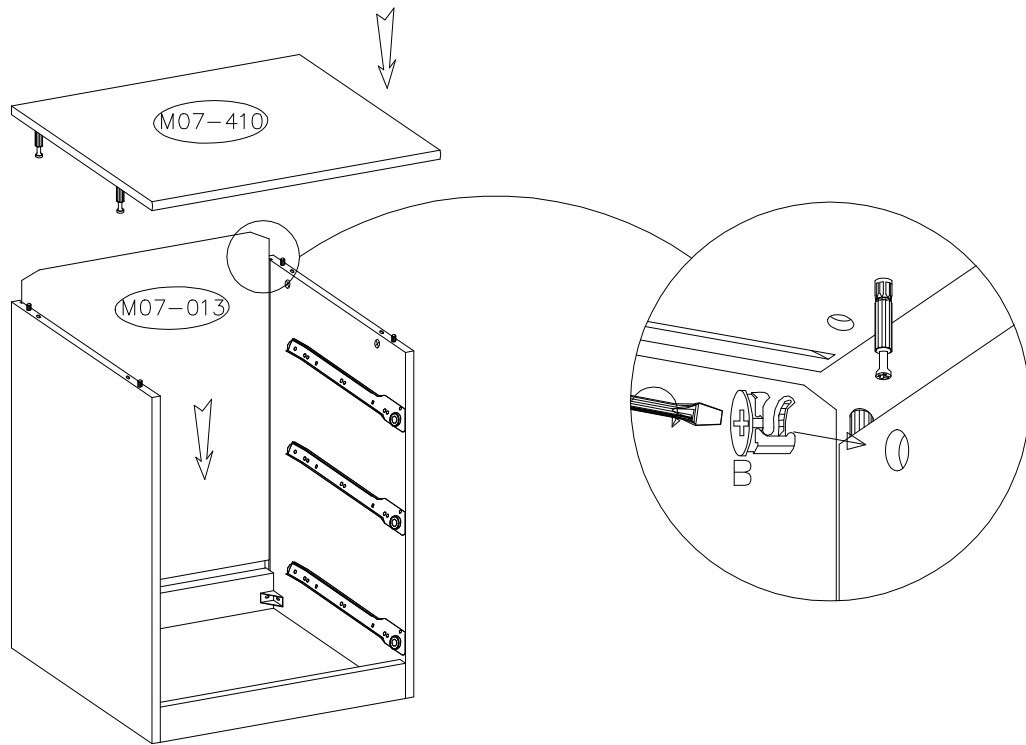











6

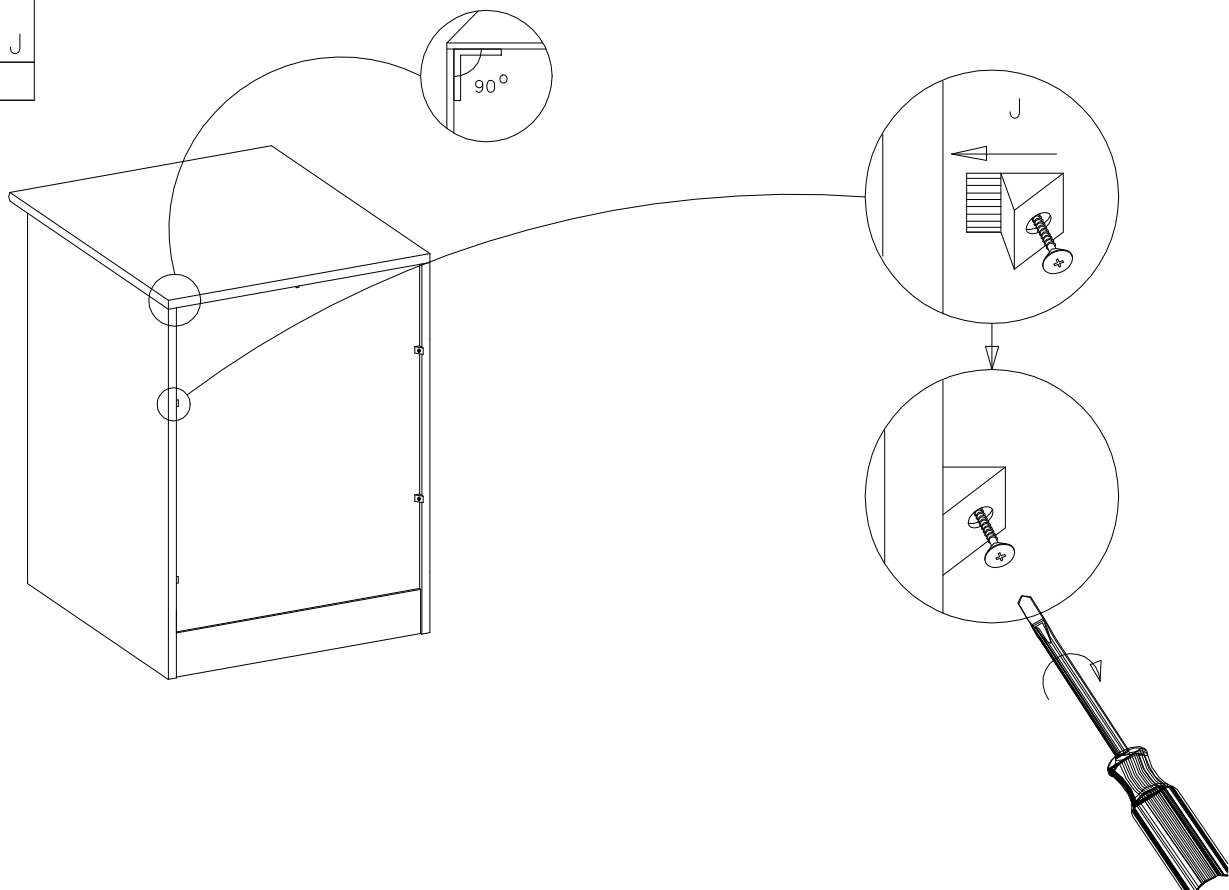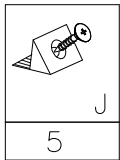


			M4.0X40		3mm		3.0X15			 R
4	2	2	2	1	1	1	4	4	4	 L
										1 KPL

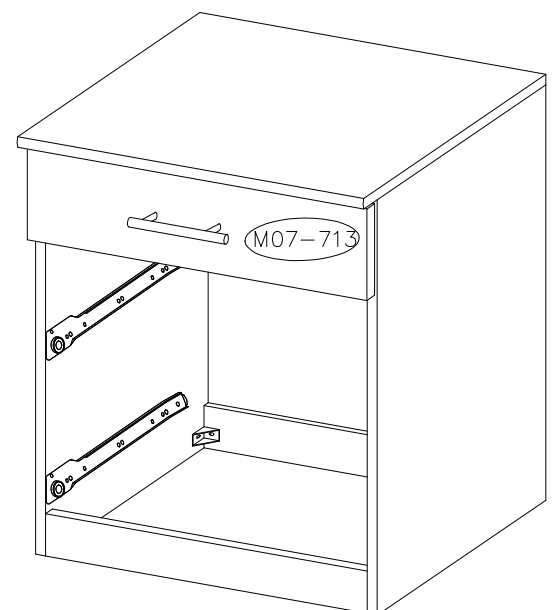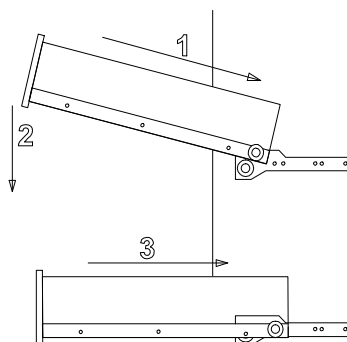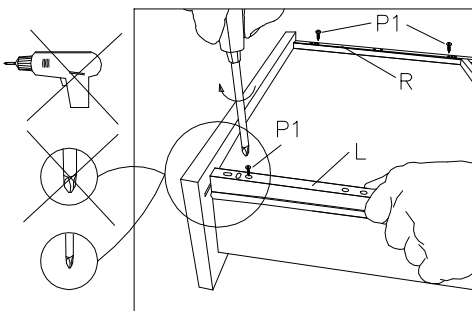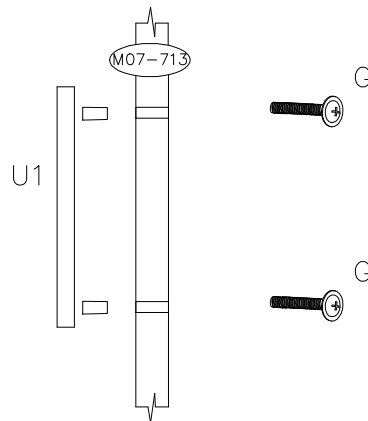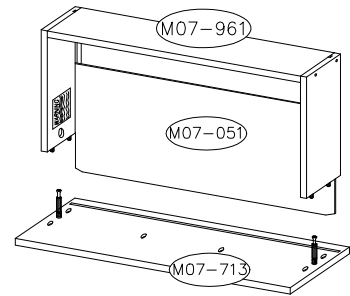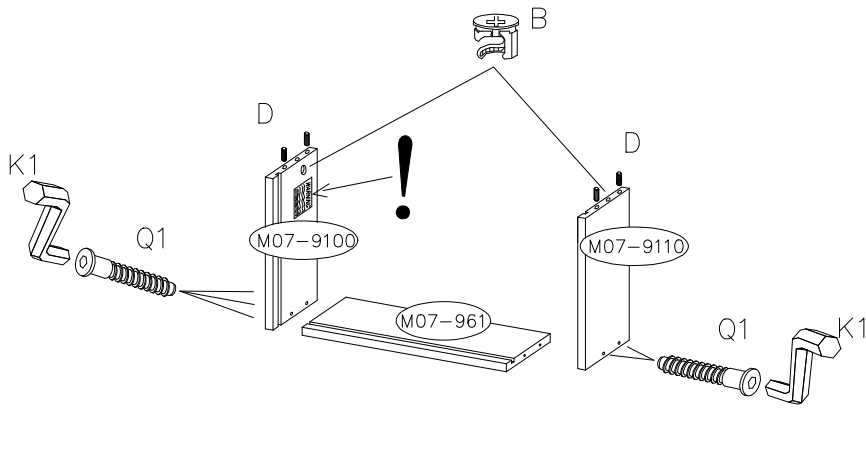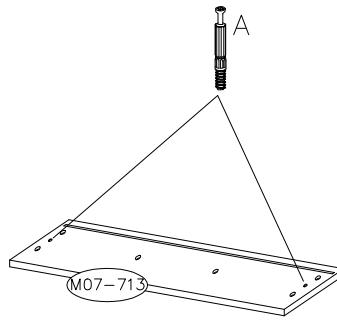

										
D	A	B	G	U1	K1	P1	Q1	R	L	C
8	4	4	4	2	1	8	10	2 KPL		6

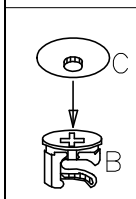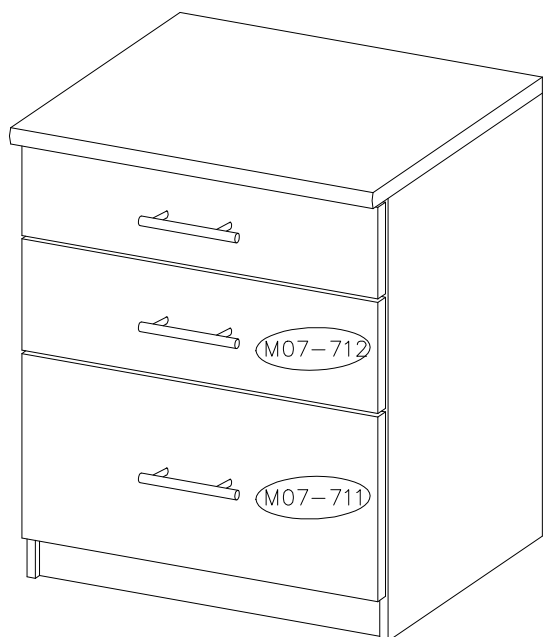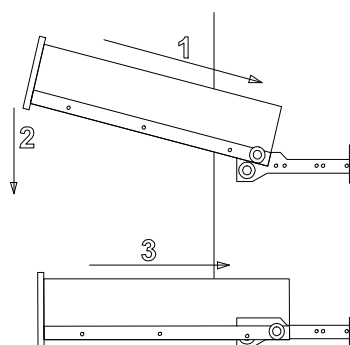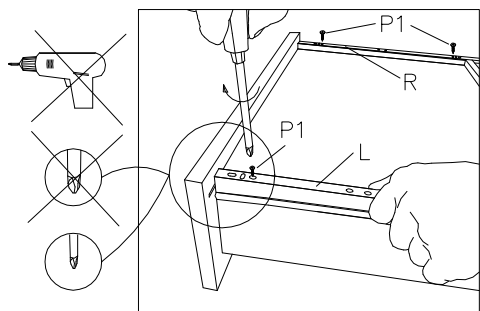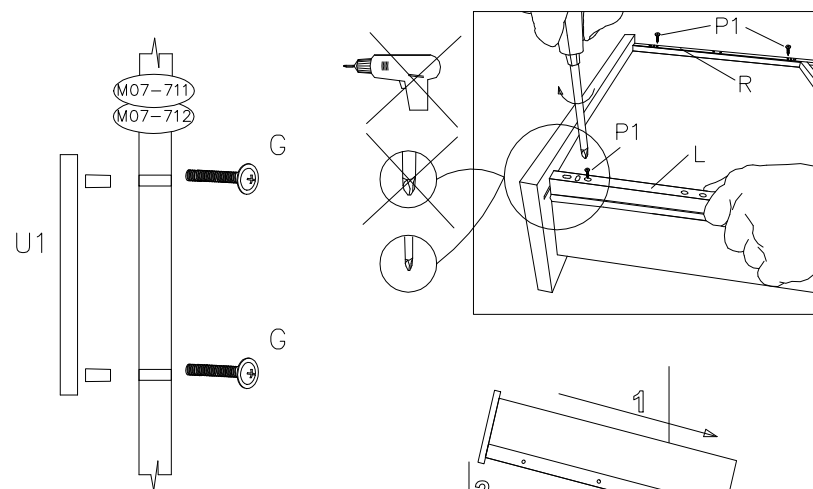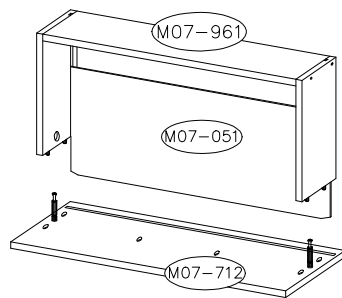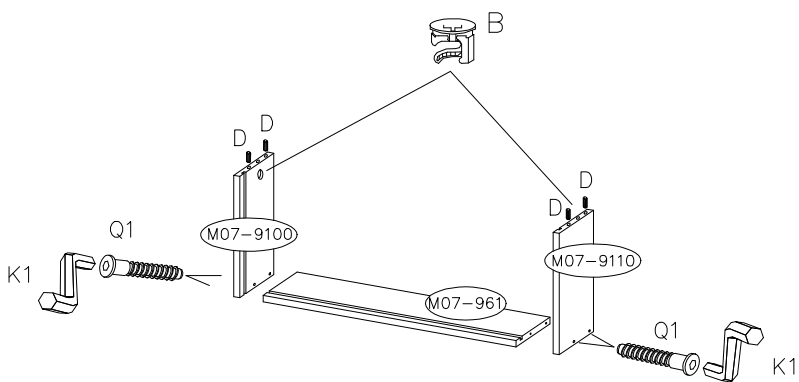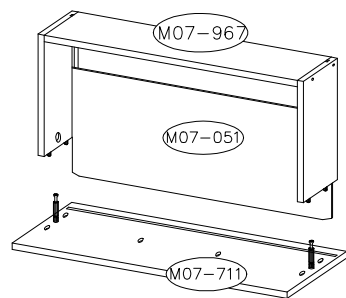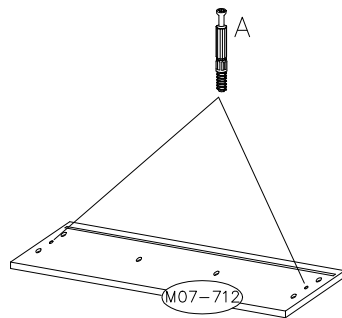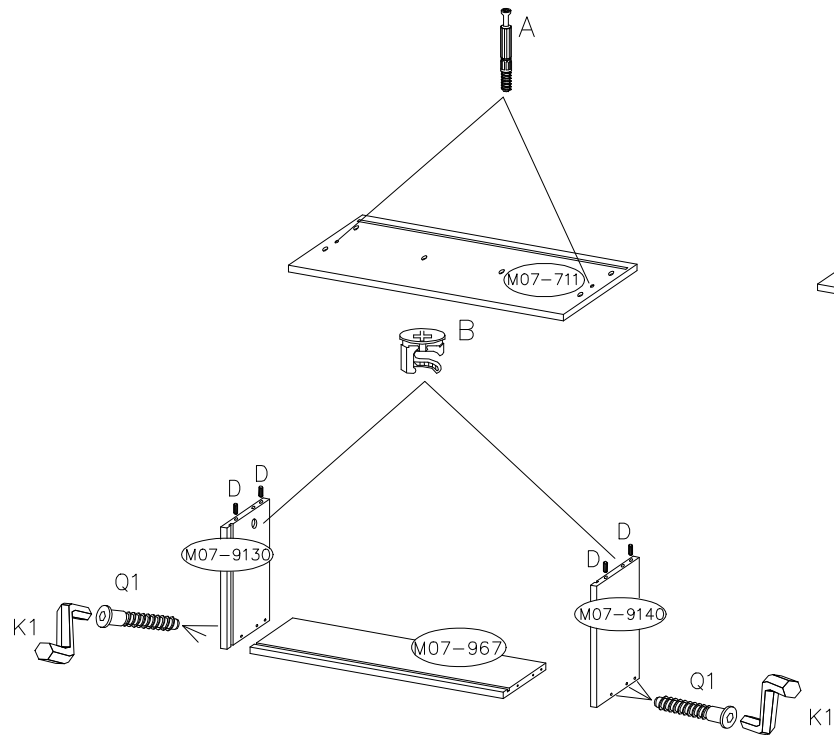

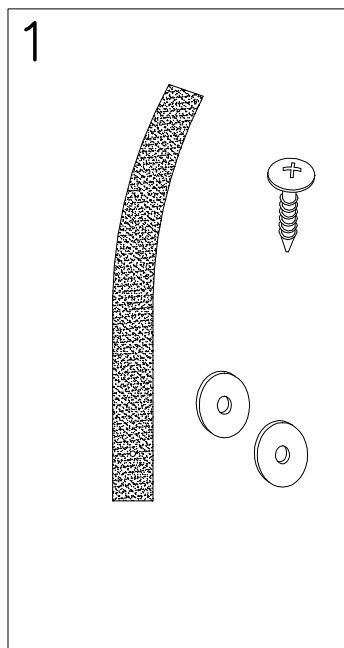

! Uwaga • Upozornini • Achtung • Attention • Caution • Figyelem Attenzione • Opgelet • Внимание • Atentie • Upozornenie • Dikkat !	
PL	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem – koniecznie zamontować!
CZ	Do některých rodů stěn končine zastoosovat ſpeciálne kotky mocojace. Montáž na ſtenu ſlouží jako ochrana proti převrnutí – bezpodmínečně umístěte! U některých typů stěn může být zapotřebí speciální hmoždinka!
D	Wandbefestigung dient als Kippschutz – unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
GB	The wall fastening serves to prevent tipping – be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
FR	La fixation murale sert de protection contre le basculement – à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
NL	Bevestiging aan de muur dient als kantelbescherming – zeker en vast bevestigen! Bij enkele muurtypes is een speciale plug misschien vereist!
IT	Il fissaggio alla parete serve da protezione anti-ribaltamento – attaccarla assolutamente! Per alcune strutture di parete può essere necessario un tassello speciale!
HU	A termék a falhoz kel rögzíténi, különben az felborulhat! Egyes faltípusoknál speciális tiplít kell használni!
RU	Обязательно установите крепление на стене во избежание опрокидывания! Для некоторых типов стен может потребоваться специальный дюбель!
RO	Sistemul de fixare la perete serve, te ca protec, ie la r, sturnare – de montat obligatoriu!
SK	Pre niektoré druhy stien môže byť potrebná speciálna hmoždinka!
TR	Duvardaki sabitleme, devrilmeye kar, bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!

