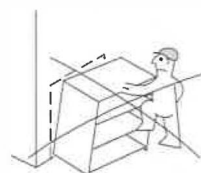
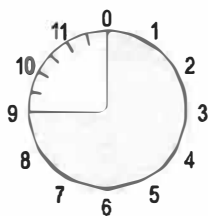
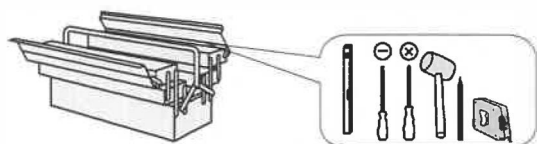
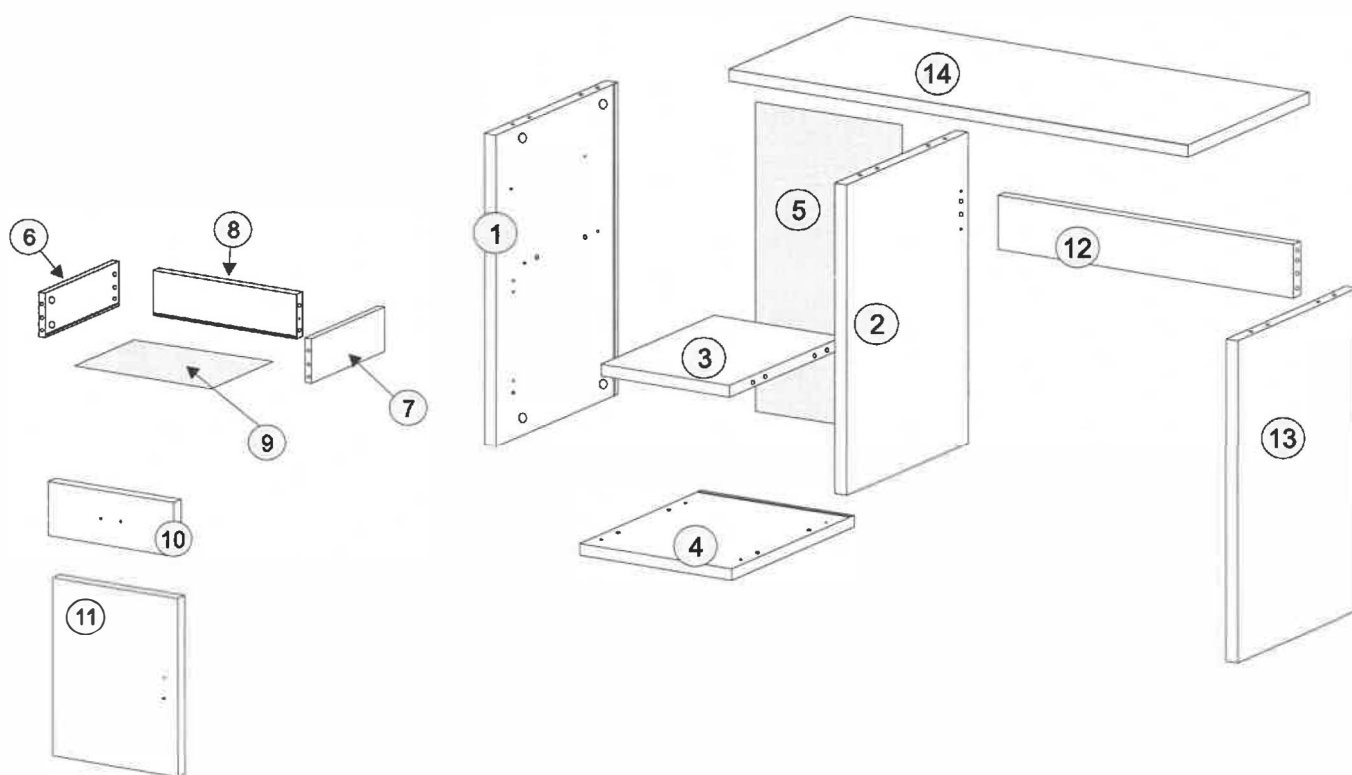
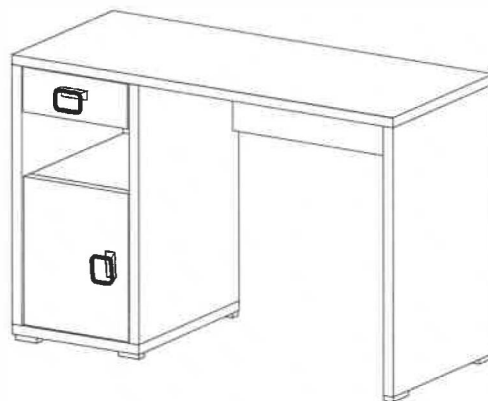













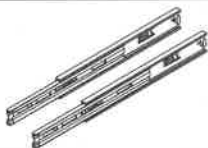
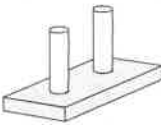





# KEVYT 8 MONTÁŽNY NÁVOD



<b>A</b>  x1	<b>B</b>  x24	<b>C</b>  x22	<b>D</b>  x22
<b>D1</b>  x18	<b>D2</b>  x4	<b>S</b>  x6	<b>H</b>  x2
<b>L</b>  x2	<b>W1 5,3x13</b>  x8	<b>W2 4x30</b>  x8	<b>W3 4x20</b>  x4
<b>T</b>  x4	<b>S</b>  x1	<b>T1</b>  x2	<b>W4 4x16</b>  x4
<b>E1</b>  x2	<b>E2</b>  x2	